# Installing the Light Kit/ Glass Bowl

**CAUTION** - To reduce the risk of electrical shock, disconnect the electrical supply circuit to the fan before installing the light kit.

THE GLASS IS FRAGILE, USE ACRE WHEN INSTALLING THE LIGHT KIT AND THE GLASS SHADE.

1. Loosen but do not remove three of four mounting screws from the light kit adaptor below the fan motor assembly; remove one mounting screw (Figure 11).

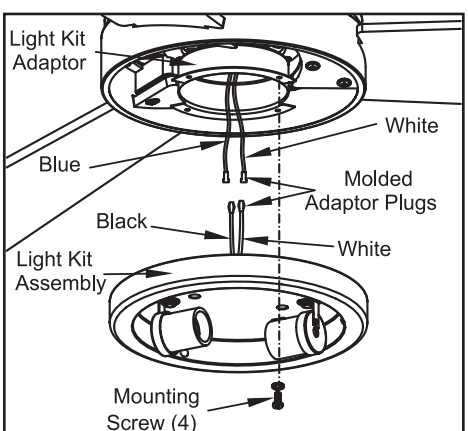


Figure 11

2. Connect the blue and white wires exiting the light kit adaptor with the black and white wires from the light kit assembly by engaging the molded adaptor plugs (blue to black; white to white).
3. Carefully tuck connectors into the light kit adaptor. Position the light kit assembly onto the light kit adaptor, aligning each of the four holes. Rotate the light kit assembly clockwise to engage the three mounting screws with the three key hole slots, tighten the screws. Re-install the one mounting screw that was removed in step 1 and tighten firmly.
4. With power off, install the two fluorescent bulbs (Max. 14W, supplied) by screwing into the light bulb sockets (Figure 12).
5. Place the glass shade into the light kit assembly, aligning the three flat areas on the top flange of the glass shade with the three raised dimples in the light kit assembly. Turn the glass shade clockwise until it stops (Figure 12).

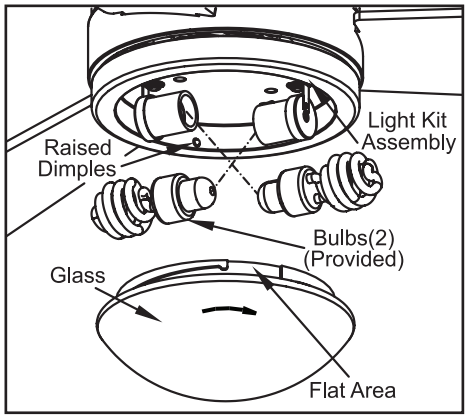


Figure 12

NOTE

**PERIODICALLY CHECK THE GLASS IS SEATED FULLY CLOCKWISE IN THE LIGHT KIT ASSEMBLY.**

NOTE

**ALLOW THE BULB TO COOL COMPLETELY BEFORE TOUCHING OR REPLACING THE BULBS TO AVOID ACCIDENTAL BURNING OF THE SKIN.**

# Cómo instalar el kit de luces/tazón de vidrio

**PRECAUCIÓN** - Para disminuir el riesgo de descarga eléctrica, desconecta el circuito de energía del ventilador antes de instalar el kit de luces.

EL VIDRIO ES FRÁGIL, TEN CUIDADO AL INSTALAR EL KIT DE LUCES Y LA PANTALLA DE VIDRIO .

1. Afloja, pero no quites, tres de los tornillos de montaje del adaptador del kit de luces debajo del ensamblaje del motor del ventilador, retira un tornillo de montaje (Figura 11).

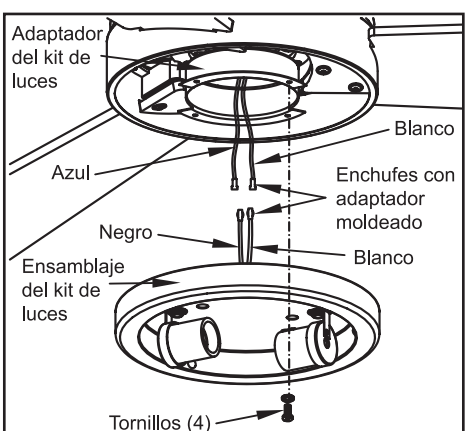


Figure 11

2. Conecta el cable azul y el cable blanco que salen del adaptador del kit de luces con el cable negro y el cable blanco del ensamblaje del kit de luces, enganchando los enchufes con adaptador moldeado (azul con negro, blanco con blanco).
3. Coloca con cuidado los conectores dentro del adaptador del kit de luces. Coloca el ensamblaje del kit de luces en el adaptador del kit de luces, alineando cada uno de los cuatro orificios. Rota el ensamblaje del kit de luces de izquierda a derecha para enganchar los tres tornillos de montaje con los tres orificios tipo ojo de cerradura, ajusta los tornillos. Reinstala el tornillo de montaje que retiraste en el paso 1 y apriétalo firmemente.
4. Con el ventilador apagado, instala las dos bombillas fluorescentes (máximo 14 vatios, incluidas) ajustándolas en el portabombillas (Figura 12).
5. Coloca la pantalla de vidrio en el ensamblaje del kit de luces, alineando las tres áreas planas en el reborde superior de la pantalla de vidrio con las tres muescas salientes del ensamblaje del kit de luces. Gira la pantalla de vidrio de izquierda a derecha hasta que se detenga (Figura 12).

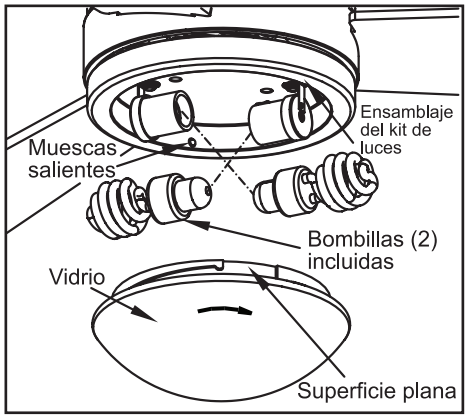


Figura 12

NOTA

**VERIFICA CON FRECUENCIA QUE EL VIDRIO ESTÉ AJUSTADO POR COMPLETO DE IZQUIERDA A DERECHA EN EL ENSAMBLAJE DEL KIT DE LUCES.**

NOTA

**ESPERA QUE LA BOMBILLA SE ENFRÍE POR COMPLETO ANTES DE TOCARLA O DE REEMPLAZARLA PARA EVITAR QUEMADURAS ACCIDENTALES EN LA PIEL.**